

6" Preformed Fabric Corners (PFI/PFO)

Product Data/Installation Instructions

National Applied Construction Products, Inc. • 800-633-4622 • Fax: 330-644-3557 • www.NACproducts.com
Important: Proper installation of this system requires use of the appropriate primers and companion products. Read and understand Product Data (PDS) and Material Safety Data Sheets (MSDS) for all products prior to installation.

Recommended Uses

NAC **Pre-Formed Inside (PFI) & Pre-Formed Outside (PFO)** corners are a lightweight, breathable fabric that can be used in conjunction with SubSeal® Liquid Waterproofing Membrane to provide an extra layer of waterproof protection in corner areas.

PFI & PFO corners are commonly used for on grade or above grade interior and exterior waterproofing solutions, or in areas above living/usable spaces.

PFI & PFO corners allow for substrate movement on 90 degree interior and exterior corners in walls and floors and ensures the integrity of waterproofing.

Features and Benefits

- Allows for substrate movement in walls and floors while assuring waterproof integrity.
- Breathable fabric material allows for SubSeal® liquid to soak into the fibers, assuring a strong & waterproof corner.
- Low profile, durable construction for easy and fast installation
- Suitable for interior/exterior use and thin-bed or thick-bed applications.
- Tile can be installed same day if no flood testing is required
- Can be cut to size with razor blade if necessary

Installation Instructions

1. Apply SubSeal® liquid waterproof membrane to the corner being treated and before installing the **PFI/PFO** corner.
2. Press fabric corner into place with hand, and flatten with margin trowel or flat object. Allow fabric to soak into liquid membrane. Let cure according to manufactures specification (approx 15 to 30 min.).
3. Apply a second coat of SubSeal® liquid membrane to outer face of corner; assuring full coverage of liquid membrane to the fabric corner.

4. Let membrane cure per manufactures specification (approx 15 to 30 min.)

Image #1

Apply a thin coat of SubSeal® to the corner



Image #2

Press fabric corner into place and flatten with a trowel. Allow to cure 30 min.

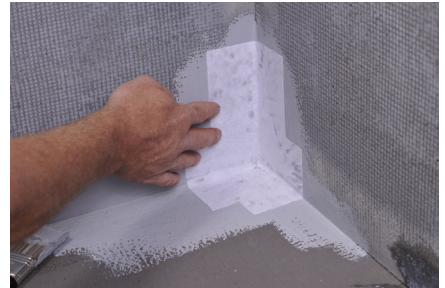



Image #3

Apply a second coat of SubSeal® to the outer face of corner



Image #4

Let SubSeal® cure approximately 30 minutes.

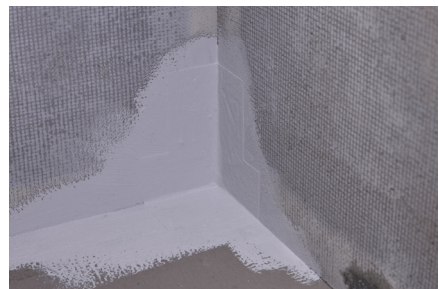

NAC PFI/PFO corners are not a stand alone product and must be used with SubSeal® liquid waterproof membrane. See SubSeal® label for additional instructions. For questions, contact NAC at 800-644-4622 or visit www.NACproducts.com.